

User manual



LEADER Cam R90



EN Read this manual carefully, before the first use

Références produit / Product references

D11.04.304	LEADER Cam R90 Reel 90m
------------	-------------------------

Contents

1.	INTRODUCTION.....	2
1.1.	General functions	3
1.2.	Detailed technical specifications	3
2.	LEADER CAM R90 DESCRIPTION	4
2.1.	CONTENTS	4
2.2.	CONTROL BOX DESCRIPTION	5
2.3.	KEYBOARD DESCRIPTION	6
3.	USER INSTRUCTIONS	7
3.1.	POWER SUPPLY	7
3.2.	REEL	8
3.3.	AUDIO HEADESET DESCRIPTION.....	9
3.4.	FUNCTIONS DESCRIPTION.....	10
3.5.	Using the sun shield	11
4.	SEARCH CAMERA MODE	12
4.1.	Using the main functions.....	12
4.2.	Camera direction function	12
4.3.	Reel end lighting intensity function.....	13
4.4.	Push to Talk function (Communicating with the victim)	13
5.	Menu: Description of the Search camera mode icons	14
5.1.	Zoom function	15
5.2.	Image rotation function	16
5.3.	Photo / video recording functions.....	17
5.4.	Picture taking function	18
5.5.	Video recording function.....	19
5.6.	Photo / video viewing function.....	21
5.7.	Right hand / left hand function	23
5.8.	Screen brightness function	23
5.9.	Audio headset function.....	24
5.10.	Loud speaker function	24
6.	TROUBLESHOOTING	25
7.	WARRANTY	26

1. INTRODUCTION

The **LEADER CAM R90** is used for rescue operations to see and communicate with victims. These two devices have been designed to carry out a precise visual location of victims in confined spaces, to dialogue with them and assess their need for help and rescue.



- Read the instructions carefully before using the product.
- The device should not be dropped or suffer shocks.
- Do not disassemble the product as this will invalid the warranty.



Do not attempt to repair the product or replace parts (except when this manual provides specific instructions to do so). Refer all servicing to your distributor, or at Leader maintenance service.

1.1.General functions

FUNCTIONS	IN SEARCH CAMERA MODE
Digital x 2 zoom	Yes
Audio headset volume control	Yes
Microphone volume control	Yes
Push to Talk	Yes
Screen brightness control	Yes
Left and right handed user	Yes
Image rotation top (0°) bottom (180°)	Yes
Battery charge level indication	Yes
Picture taking	Yes
Video recording (with no sound)	Yes
Audio recording (recording of sounds on the communications boom)	Yes
Photo and video gallery to view recordings	Yes

1.2.Detailed technical specifications

Refer to product data sheet available on our website at www.leader-group.eu.

2. LEADER CAM R90 DESCRIPTION

2.1. CONTENTS

- 1 watertight and shock proof transport case.
- 1 control box with screen and keyboard and fixing straps (shoulder and hand strap).
- 1 90m (300ft) long cable on a reel with a pivoting camera with lighting, microphone and loud-speaker module.
- 1 stereo anti-noise headset with microphone.
- 1 rechargeable battery pack.
- 1 battery pack for 10 AAA batteries (batteries not included).
- 1 charger block 100/240V 50/60Hz.
- 1 set of international adapters.
- 4 yellow caps used to make the tip of the camera watertight.

Available options:

- 1 stereo noise reducing headset with microphone and suitable connectors.
- Extra battery pack.
- Cable extension 90 m or 300 ft long connectible for visual searches up to 180 m or 600 ft.

2.2.CONTROL BOX DESCRIPTION

The control box is composed of a 7 inch TFT colour 16/9 high brightness screen. It also has a keyboard used for multiple settings but also to scroll through the different menus.



Battery pack



Boom connector

Aerial connector (function not available)


USB Connector (audio function not available)

2.3.KEYBOARD DESCRIPTION

The keyboard has photo luminescent keys for better visibility in the dark.

The keyboard is reversible for use by a right handed or left handed operator. To switch from one to the other, the corresponding function must be selected.

"Right hander mode" view:

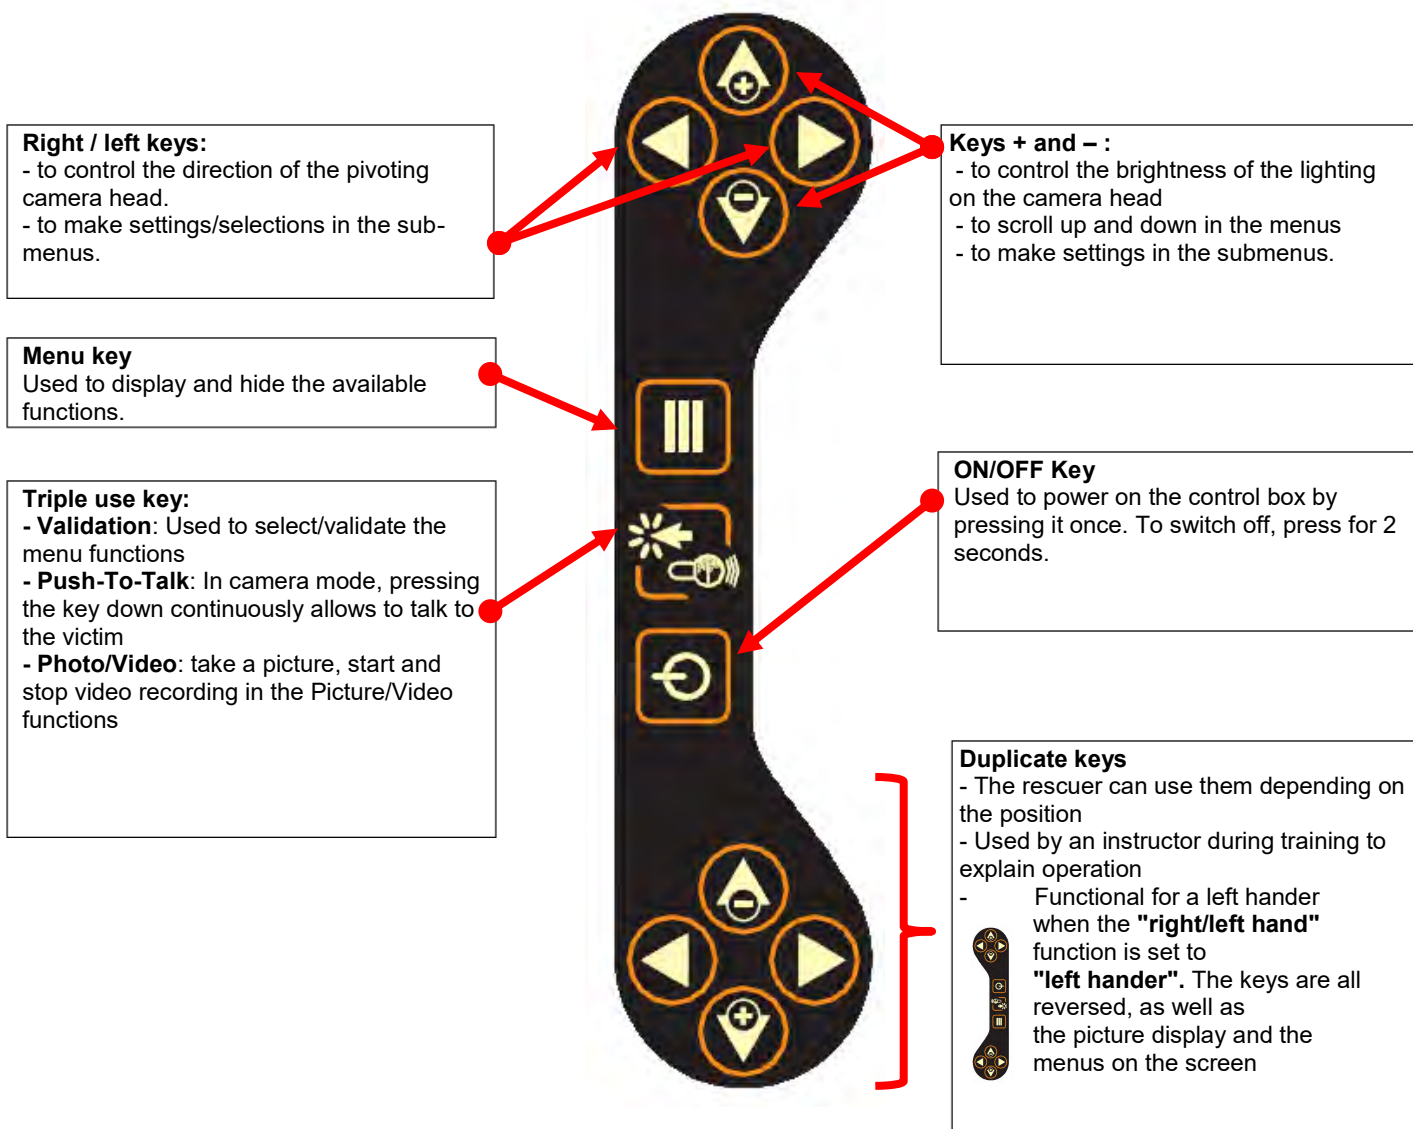

3. USER INSTRUCTIONS

3.1. POWER SUPPLY

The **LEADER Cam RD90** is delivered with a lithium polymer battery pack which is inserted into the back of the control box.



The battery pack is recharged **SEPARATELY** from the control box.

Charging can be carried out at between 0°C and 45°C (maximum temperature) using the supplied charger.

During charging, a LED located on the charger provides the following indications:

- ● Green: battery charged or battery not connected to the charger.
- ● Red: battery charging.

During operations, if the battery pack is run down, the user can either use another battery pack (supplied as an option D11.04.351), or the backup battery pack as a replacement for the initial battery pack. The backup battery pack requires 10 AAA batteries (not provided).



The battery pack can **ONLY** be charged using the supplied charger block. It can be used with 100/240VAC - 50/60Hz

The international adapters can be used to recharge the battery pack on all US, Australian, European, and UK power outlets.



Battery pack



Charger block

Mains adapters

Once the appliance is powered on, if the camera or at least one seismic sensor is turned on, an icon showing the battery pack charge level remains displayed on the top right of the screen.



5 icons to show the control box battery pack charge level



Icon displayed when the backup battery pack is being used



3.2. REEL

The reel is equipped with 90 m (300ft) long cable. It is equipped with a rotating video camera with integral lighting and a microphone/speaker module. The 47mm diameter head is small enough to be inserted into core cutter holes. The microphone is sensitive enough to pick up whispering. The video cameras 90° viewing angle, and the fact that it can rotate through 160° means that the equipment has an observation angle of 250°, with no blind spots. In option an extension of 90 m (300ft) cable on reel is available for visual research until 180m (600ft).

NB: Over a 180 m (600ft) length only the video is available. The communication between the rescuer and the victim is not possible with two reel.

Setting-up:

- Connect the reel to the consol.
- Connect the headset(s) to the consol.
- Turn the control panel on by pressing the 'on/off' button.
- To turn the consol off, press the 'on/off' button for 2 seconds.
- When the consol is turned off, the camera resets itself in line with the axis so as to facilitate stowing it in the case.
- The default position for the gains is 'middle', except for the lighting, which is off.

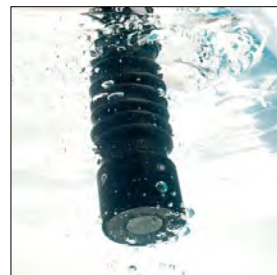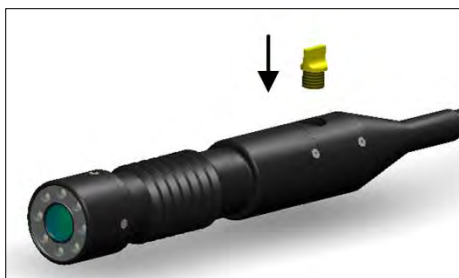

The camera head is protected both by a watertight plastic sleeve over its entire length and by a non scratch sapphire lens on its façade. The camera head can be made watertight: To do this a cap must be fitted onto the microphone/speaker.

The metal plate of the the microphone/speaker needs to be unscrewed and must be replaced by the waterproof cap.

This system makes it possible to search under water to a maximum depth of 2 m or 6 ft.

3.3.AUDIO HEADESET DESCRIPTION

The **LEADER Cam R90** has a noise reducing headset with a microphone. It is equipped with a neck band, an omnidirectional microphone, 2 300 ohm earpieces and a connection cable (length 2 m) with a specific watertight connector once connected to the control box.

The audio headset is used to:

- communicate with the victim in search camera mode
- to listen to the wireless sensors in seismic mode



A second optional headset can be connected to the control box using a Y connector allowing two headsets to be connected to the me connector.

3.4. FUNCTIONS DESCRIPTION

Powering ON



The device is powered on by pressing the **ON/OFF** key once.

On powering on, a first screen is displayed.

A loading screen quickly follows. On the bottom left of the screen it shows the version of the device software and on the bottom right the serial number.



If the reel is not connected, the screen shows the following icons **"camera not connected"**. The device will remain on this screen for 5 minutes before powering off automatically if no action is detected.



Turning off the control box



To turn off the control box, press the **ON/OFF** key for 2 seconds.

A message is displayed indicating that the battery should not be removed until the message disappears: **"Please, DO NOT REMOVE the battery pack while this message is displayed"**


Please follow these instructions so that the software closes correctly and to guarantee it operates correctly the next time it is launched.

3.5.Using the sun shield




In bright light, the sun shield is used to place the screen in a dark area to be able to see it better.

To hold the sun shield on the control box it must be correctly positioned on the face on the forms designed to this effect. The red line shows the position.

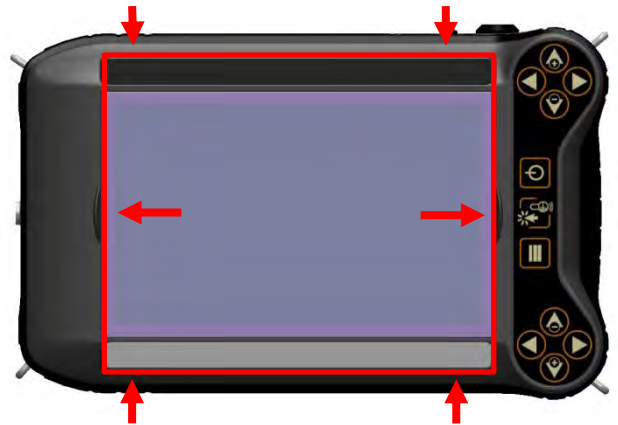

The wide elastics are used to fit it quickly and easily.

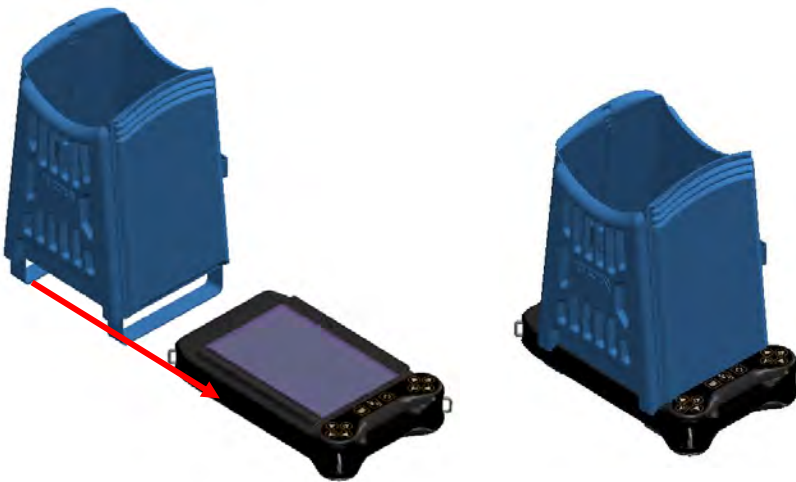




It is stored flat for easier transport. An elastic on its side is used to keep it flat and fix it to the control box. By placing it on the screen face, it protects the screen when moving around when the search device is not in use.

It has small inner pockets to store an SD photo card for example.

4. SEARCH CAMERA MODE

4.1. Using the main functions

The search camera mode and its menu appear when the boom is connected. Pressing the menu button accesses the different function .

Up to ten icons can then be selected. The "▲" and "▼" navigation keys are used to select the required function. Pressing the validation key  gives access to the required function. Pressing the menu key  again exits the menu window and returns to the main screen.




4.2. Camera direction function

The right/left camera orientation is achieved using the ► or ◀ keys without using the menu. When the camera rotates, an icon is displayed on the screen showing its position.

The camera head can be mechanically oriented 85° to the right and 85° to the left (170° total). The directional camera and head provide a 260° field of vision without any blind spots.

- Pressing keys ► or ◀ first displays the icon and shows the camera position.
- Pressing the ► or ◀ key again moves the camera to the right or left depending on the key that is used. On the screen, the position icon shows 9 increments. The key must be pressed several times to pass from one increment to the next. Keeping the key pressed down permanently rotates the camera continuously.
- The icon disappears after 2 seconds if there is no action on the ► or ◀ keys.

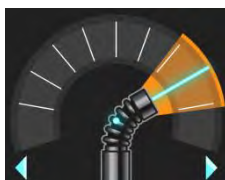


*Example of right rotation.
The blue axis shows the direction.
The orange zones show the field of vision.*

4.3.Reel end lighting intensity function

The intensity of the lighting at the tip of the boom is controlled directly using the ▼ and▲ keys without using the menu. When modulating the lighting, an icon is displayed on the screen showing the intensity level:

- 8 lighting intensity levels can be selected.
- Pressing the ▼ or▲ keys displays the icon and checks the lighting intensity.
- The lighting only changes when the ► or ◀ keys are pressed a second time.
- Continuously pressing a key makes it possible to increase or decrease the lighting intensity continuously.
- The icon disappears after 2 seconds if there is no action on the ► or ◀ keys.

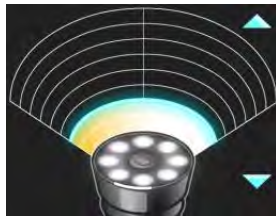

Example of the "lighting" icon

4.4.Push to Talk function (Communicating with the victim)



By default, listening to the victim has priority. Transmission from the rescuer to the victim is established by keeping the **Push-to-talk** key pressed down (press to talk). Transmission to the victim does not allow the victim to be listened to while the **Push-to-talk** button is being pressed.

A second headset can be connected (supplied as an option). The second headset has the same functions as the first.

If the **Push-to-Talk** button is not pressed, both headsets communicate with each other without the victim being able to hear.

5. Menu: Description of the Search camera mode icons



- The "**picture zoom**" function is used for digital enlargement. The displayed image can be enlarged twice (Digital zoom x2).



- The "**picture rotate**" function is used to rotate an image by 0°, and 180° on the screen.



- The "**video**" function is used to record videos on the micro SD card.



 
- The "**picture**" function is used to take shots and record them on the micro SD card.



- The "**left/right hand**" function is used to allow the control box to be used by a left handed or right handed operator by reversing the image, function display on the screen, and the keyboard operation.




- The "**brightness**" function is used to set the screen brightness.



- The "**headset**" function is used to control the headset volume when listening to the victim.



- The "**speaker**" function is used to control the volume of the loud speaker at the tip of the boom. It is used for communications between the rescuer and the victim.

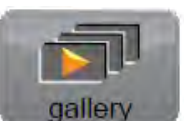

- The "**gallery**" function gives access to the video recordings and pictures taken using the "**video**" and "**picture**" functions to view them on the screen.



The "**picture zoom**", "**picture rotate**", "**picture**", "**video**" and "**left/right hand**" functions can be used at the same time.

Once the functions have been selected, miniature icons appear at the top right of the screen. They remain on the screen permanently until they are deactivated.






5.1.Zoom function

The "**picture zoom**" function is used for digital enlargement. The displayed image can be enlarged twice (Digital zoom x2).




- To zoom: select the "picture zoom" function from the menu then press the validation key. Once on the sub-menu, select "**zoom in**" then press the validation key to activate the function and enlarge the picture by 2.

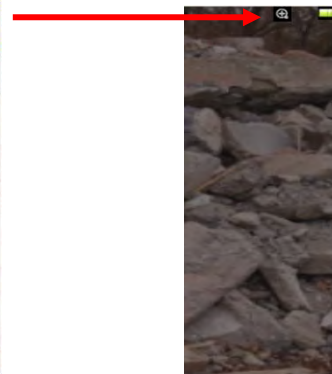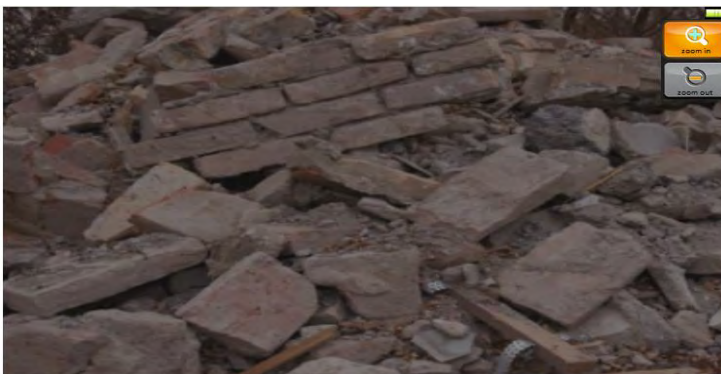

A magnifying glass icon  appears at the top right of the screen to indicate that the image has been enlarged

- To zoom out: select the "**picture zoom**" function from the menu then press the validation key. Once on the sub-menu, select "**zoom out**" then press the validation key to activate the function and display the picture at its normal x1 size.

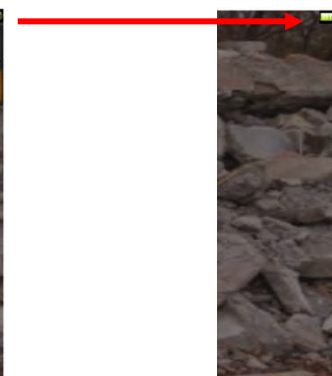

The magnifying glass icon then disappears from the top right of the screen.



5.2. Image rotation function

The "**picture rotate**" function is used to rotate an image by 0°, and 180° on the screen.

- By default the image is displayed the right way up at 0°.



- To rotate by 180°, select the "**picture rotate**" function from the menu then press the validation key. Once on the sub-menu, use the keyboard ▼ key directly. The image rotates immediately.

An ▼ icon appears at the top right of the screen to indicate in what direction the image is now positioned. The middle tip of the triangle shows the top of the image.



- To place the image back at 0°, press the ▲ key directly if you are still on the sub-menu. Otherwise select the "**picture rotation**" function from the menu then press the validation key. Once on the sub-menu, use the keyboard ▲ key directly. The image rotates immediately.

5.3.Photo / video recording functions




The **LEADER Cam R90** has a picture taking and a video recording function. These two functions are only available if a microSD backup card is in the control box reader. A Class 10 4Go card is inserted in the reader of each delivered control box.

The number of pictures and recorded video times vary depending on the number of pictures and videos taken as the intervention progresses. However, as an indication:

- If only pictures are taken (with 1Go): 1000 pictures can be saved.
- If only videos are recorded (with 1Go): about 1 hours of video can be saved.

The microSD card reader is located under a flap behind the control box. To access it, remove the battery pack.

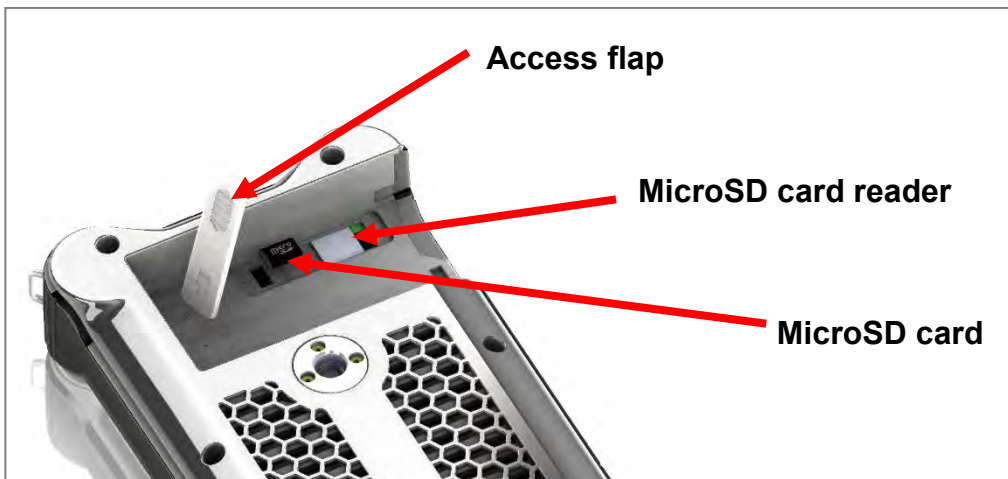

The **"picture"** (photos), **"video"** and **"gallery"** (viewing pictures/videos) are only active when a microSD card is present in the control box. Otherwise the icons for these functions are greyed out.








5.4. Picture taking function

The **"picture"** taking function is used to take shots and save them on the microSD card. To take a shot select the **"picture"** function from the menu then press the validation key.



Each time a picture is taken the  icon appears at the top right of the screen to show that the picture is being saved to the microSD card. The menu also disappears when this is complete.



When the  icon reappears, the device is ready to take another picture. It is not, therefore, required to press the validation key again for this  icon to reappear.





5.5. Video recording function

The video function is used to record videos on the micro SD card.

To record a video, select the **"video"** function from the menu then press the validation key.

This action triggers the video recording and removes the menu from the screen.





When recording, the  and  icons appear alternatively on the top right of the screen to indicate that a video is currently being recorded.



To stop recording, select the **"video"** function from the menu then press the validation key.



The menu that appears is:



The  and  icons disappear, as does the menu. The camera image reappears on the screen by itself.

The **"video"** function can be used at the same time as the following functions:



- **Picture zoom;** If this function is active, the magnifying glass icon  is displayed at the top right of the screen. On the other hand, the recorded video ignores the x2 zoom. The images are recorded at normal x1 size.
- **Picture rotate;** If this function is active, the  icon is displayed at the top right of the screen. On the other hand, the recorded video ignores the selected rotation value.
- **Left/right hand;** If this function is activated for left handed people you will notice the fact because the control box will be operated using your left hand. The image, the menu on the screen, and the keyboard keys will all have been reversed. No icon is displayed to avoid cluttering the screen.
- **Brightness;** This function which controls screen brightness remains accessible using the menu.
- **Headset;** This function which controls the audio headset volume remains accessible using the menu.
- **Speaker;** This function which controls the reel tip loud speaker volume remains accessible using the menu.

The camera head **rotation and lighting** functions are operational during recording.



5.6. Photo / video viewing function

The function is only available if the microSD card is present in the control box.

Pictures and videos are viewed using the **"gallery"** function. To access the function, select the **"gallery"** icon from the menu then press the validation key.




The photo or video that is centred on the screen is historically the first that was saved. You therefore need to scroll through all the previously saved photos and videos to be able to view the last photo or video.



Scrolling in the **"gallery"** function uses the ◀ and ▶ keys on the keyboard. Pressing the validation key is used either to read or stop reading the pictures and videos. When a selected file is being played, the image is enlarged to full screen size.

When the end of a video is reached, it stops and displays the **"stop"** icon  to confirm the end of the video.

Videos are identifiable by the  icon which is embedded over the displayed image. Photos do not have an icon.

The menu key is used to exit the **"gallery"** function.

The pictures and videos can also be read on a computer. Software compatible with the file formats is required:

- Photo formats: Viewable using **"Xnview"** software, downloadable:
<https://drive.google.com/drive/folders/0B2x7i5oli1SsVTNlc3pyLTNINik?usp=sharing>
- Video formats: Viewable using the **"Zoom player"** software downloadable:
<https://drive.google.com/drive/folders/0B2x7i5oli1SsLUYtV3A5RXFtcEk?usp=sharing>

To read the files insert the microSD card in the SD microSD adapter (supplied). Then insert the adapter into a computer which has a card reader. Then open the file using the correct software.



Photo and video files can only be deleted from a computer.

5.7. Right hand / left hand function



The "**left/right hand**" function is used to set the control box for use by a left handed or right handed person. To access the function, select the "**left/right hand**" icon from the menu then press the validation key.

When selected the function reverses the image and the function displays (menu and sub-menu), as well as the keyboard operation.

By default the software is set for use by a right handed person.



5.8. Screen brightness function



The "**brightness**" function is used to vary the screen brightness to adapt to surrounding light conditions.

To access the function, select the "**brightness**" icon from the menu then press the validation key. Once the function has been selected, use the ▲ and ▼ keyboard keys to increase or lower the brightness of the screen.

Reducing the brightness also saves battery power during the intervention and increases the equipment's autonomy.

By default, brightness is set to 50% of its power.

The device memorises the brightness setting. The user can therefore switch from search camera mode to seismic sensor mode (and vice versa) without the setting being impacted.



5.9. Audio headset function

The **"headset"** function is used to control the headset volume when listening to the victim.

To access the function, select the **"headset"** icon from the menu then press the validation key. Once the function has been selected, use the ▲ and ▼ keyboard keys to increase or lower the volume on the connected headset(s).

A second optional headset can be connected. It is supplied with a Y connector used to connect both audio headsets to the control box.



5.10. Loud speaker function



The **"speaker"** function is used to control the volume of the loud speaker at the tip of the reel. It is used for communications between the rescuer and the victim.

To access the function, select the **"headset"** icon from the menu then press the validation key. Once the function has been selected, use the ▲ and ▼ keyboard keys to increase or lower the volume on the connected headset(s).



6. TROUBLESHOOTING

Problem	What to do
The console will not start	<ul style="list-style-type: none">• Check that the battery is charged.• Check that the battery pack is connected.• Check that the battery is not charging when connected to the control box.
Reel not detected	<ul style="list-style-type: none">• Check that the reel cable (orange) is 'not damaged.• Check that the reel connector is correctly connected.
No picture or blurred image	<ul style="list-style-type: none">• Check that the protective cap the camera is removed.
Recording function " Video Photo " and " Gallery " grayed	<ul style="list-style-type: none">• Check that the microSD card is present in the control box.
Little or no sound in the headset	<ul style="list-style-type: none">• Check that the audio volume has not been reduced.• Check that the headset is properly connected.

7. WARRANTY



LEADER SAS guarantees the original purchaser of the **LEADER Cam R90** that the equipment is free of equipment and labour defects for two (2) years from the purchase date for the control box, the boom and the sensors, and one (1) year for the rechargeable battery. This limited warranty is only applicable to the original buyer and not for third parties to whom the equipment may have been resold.

LEADER SAS's duties under this warranty are specifically limited to the replacement or repair of the equipment (or its parts) after it has been inspected by **LEADER** and considered by **LEADER** to be defective. To be able to benefit from this limited warranty, the claimant must send the equipment to **LEADER SAS** within a reasonable time of having discovered the said defect. **LEADER** will inspect the equipment. If **LEADER** determines that it is liable for the defect, the company will resolve the problem in a reasonable time. If the equipment is covered by this limited warranty, **LEADER** will pay the costs of the repairs.

In the situation where any defect for which **LEADER** is liable under this limited warranty could not be reasonably resolved by a repair or a replacement, **LEADER** may then choose to refund the purchase price of the equipment, from which a reasonable depreciation value will be deducted, in order to fulfil its duties under this limited warranty. If **LEADER** decides to do this, the claimant must send **LEADER** the equipment free of charge and free of any liabilities or constraints.

This warranty is limited. The original purchaser, any person to whom it may be transferred, and any person who is the intended beneficiary of the equipment or not, cannot claim the payment of any damages from **LEADER** in the event of injuries and/or material damage due to any defective equipment manufactured or assembled by **LEADER**. Some countries do not allow the exclusion or limitation of damages: the above section may or may not be applicable depending on the country. **LEADER** cannot be held liable under this limited warranty if the equipment has been used inappropriately or negligently (including the absence of reasonable maintenance), or if it has suffered accidents or been repaired or modified by a third party.

THIS WARRANTY IS ONLY AN EXPLICIT LIMITED WARRANTY. LEADER DOES NOT ACCEPT ANY IMPLICIT WARRANTY FOR COMMERCIAL QUALITY AND SUITABILITY FOR ANY OTHER SPECIFIC USE. NO OTHER WARRANTY (OF ANY TYPE WHATSOEVER) THAN THE WARRANTY GIVEN BY LEADER IN THIS DOCUMENT WILL BE ACCEPTED.

LEADER

MANUFACTURER

LEADER S.A.S.

Z.I. des Hautes-Vallées
Chemin n° 34
CS20014
76930 Octeville sur Mer
France



www.leader-group.eu

www.LeaderNorthAmerica.com

Our policy is to constantly seek to improve our products. We therefore reserve the right to change their technical specifications at any time and without prior notice. - Non contractual images



PLEASE RECYCLE

Code notice:
R90.00.ZN.8.26.EN.2