



# Easy Pow'air MT236

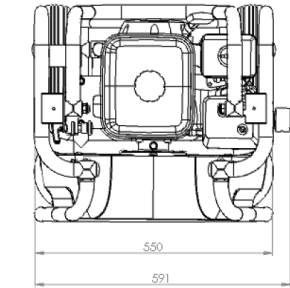

## Easy Pow'air MT236 : GENERAL FEATURES

Manufacturer's reference I60.10.042 I60.10.057  
 Manufacturer Leader North America, Inc.

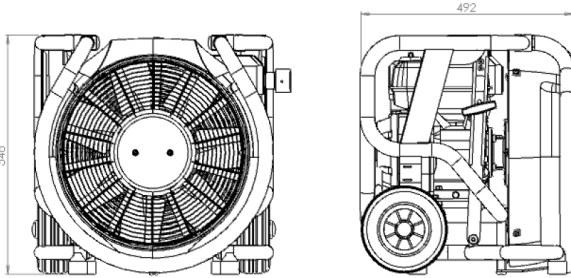

Weight : 93 lbs  
 +/- 1lbs

H=21.65" W=21.65"  
 D=19.3"  
 +/- .5"

### Construction :

- Chassis in  $\varnothing$  1.18 " steel tube – epoxy coating
- Engine Honda GX160 type – 4-stroke – 4.8HP (5.5 HP SAEJ607)
- Fan shroud in 0.1 " sheet aluminium
- Turbine made of composite resin -  $\varnothing$  16 " – aluminium axle
- Run time - 2h10m at full speed
- Standard equipment : engine stops automatically in the event of shortage of oil or if the fan is accidentally knocked over.
- Noise level around 90.9 dB(A) at 118 ".
- Retractable handle, two 8" diameter wheels.
- Angle of tilt adjustable (from 10° to 20°).
- Airflow: 17.376 CFM

**Guarantee:**  
 3 years, parts and labour, for the engine, see manufacturer's documentation

This equipment should be used only by firefighting professionals

## INSTRUCTIONS FOR START-UP :

The following checks must be carried out before first starting the fan:

- Make a visual check of the MT236 and its accessories to make sure that no damage occurred during transport.

**ATTENTION:** Do not attempt to start the MT236 ventilator if you notice any kind of anomaly. Contact **Leader North America, Inc.** immediately.

- Check that the manual for the HONDA is contained in the pack.

With the engine off, pull the recoil starter. If there is any unusual noise, or if the turbine gets stuck, stop the engine and contact **Leader North America, Inc.** immediately.

Read the instruction manual for the engine before filling up with oil or gasoline.

Use the fuel and lubricant recommended in the instruction manual for the engine: fresh, unleaded gasoline with an octane rating of at least 85.

Fill the engine's oil sump with a type of oil recommended in the instruction manual.

**MT236 : engine HONDA: oil capacity: 0.16 Gallons (20W50)**

The limits for oil use are shown in the HONDA engine manual.

Make sure that everyone responsible for or using this equipment is fully aware of the safety and operating precautions pertaining to rotating machinery.

**NOTICE:** By its nature, a gasoline engine creates vibrations. It is normal for the fan to vibrate when in use, particularly at medium power. To ensure better stability for the MT236 fan, particularly on an uneven surface, put the accelerator up to maximum power. This will reduce the vibrations and improve the equipment's stability.

It is possible that there will be some extraneous vibration during the engine's running-in period. These will disappear after several hours' use.

## START-UP OPERATIONS :

The way the MT236 fan is started depends on the terrain on which it is being used.

- 1/ Check that the fuel tank is full.
- 2/ Check that there is no fuel leakage.
- 3/ Place the MT236 fan on a flat surface where there are no slippery products and which is clear of debris. Make sure there is no obstacle between the fan and the opening for air entry.
- 4/ Start the fan after making sure that it is in a stable position, and adjust the accelerator so as to obtain the desired airflow. (For more information, see the engine manufacturer's manual).
- 5/ During blowing operations, regularly check that no obstacle is preventing the airflow from penetrating the interior of the building, or blocking the fan's suction grill


## ADJUSTING THE TILT:

Use between 6 to 12 feet from the opening

- 1) Lift the carrying handle, the fan is automatically tilted to an angle of 10° (operating angle recommended for 90% of incidents).
- 2) To close the carrying handle, unlock it using the index pin (ref. A).





### Option : -10° Tilt Positioning Adaptor

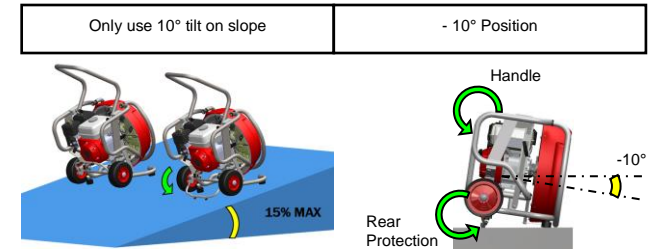

## ADJUSTING THE TILT: LANDING, ENTRY WITH STEPS, WINDOW:

Use between 12 and 18 feet from the opening

- 1) To adjust the tilt between 10° and 20°, unlock the tilt adjustment lever by moving it a quarter turn.
- 2) Tilt the fan manually so as to Center the jet of air on the opening.
- 3). Lock the lever while holding the fan in place so as not to alter the tilt.

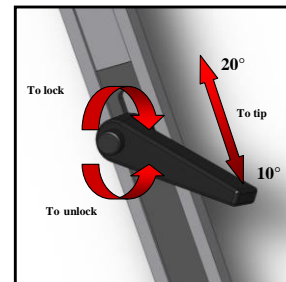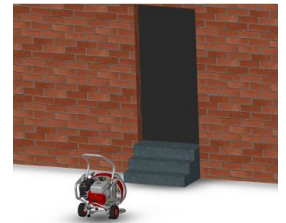

**IMPORTANT: READ BEFORE USE**



FABRICANT  
MANUFACTURER

FABRICANTE

**LEADER S.A.S.**

Z.I. des Hautes-Vallées  
Chemin n° 34  
CS20014  
76930 Octeville sur Mer  
France



[www.leader-group.eu](http://www.leader-group.eu)

[www.LeaderNorthAmerica.com](http://www.LeaderNorthAmerica.com)

Our policy is to constantly seek to improve our products. We therefore reserve the right to change their technical specifications at any time and without prior notice. - Non contractual images



PLEASE RECYCLE

Code Notice :  
MT236.0ZN.3.33.US.0

**SAFETY INSTRUCTIONS :**

This equipment is manufactured in compliance with CE directives and ISO-9001. It should be used only by fire-fighting professionals.

Read this manual completely, together with the attached instructions for the use and maintenance of the engine before starting up or using the equipment.

Do not remove the gasoline tank cap, or fill the tank, while the engine is running or when it is hot (let the engine cool down for 2 minutes before filling the gasoline tank).

Keep fingers and hands away from the turbine and the hot parts of the equipment (cylinder block and exhaust).

Do not start up the engine when the air filter or the air filter cover are removed.

Always use recently produced unleaded gasoline. Gasoline which has been stored for a long time forms a deposit which could block the carburettor.

Do not run the engine in an enclosed space. (The exhaust gases contain carbon monoxide.)

Do not fill the gasoline tank in an unventilated area.

This ventilator must be operated or repaired only by qualified, trained staff.

Do not start up the engine if the blades or the protective shroud show any signs of damage.

Never move the ventilator when it is running at full speed.

Only use genuine spare parts supplied by **Leader North America, Inc.** when replacing damaged or defective parts.

During maintenance operations, the wire leading to the spark-plug should be removed and fixed elsewhere.

**MT236** type blowers must not be used in explosive atmospheres.

Do not remain in the fan's outlet area (risk of flying debris).

Keep this equipment out of reach of children.

Wear safety glasses, gloves and earmuffs when using this ventilator.

Never allow anyone to use a ventilator without first giving them the necessary instructions.

Do not wear loose clothing which could get caught in the ventilator.

Do not use chocks or any other system for increasing the ventilator's tilt angle.

Do not forget to put oil in the ventilator's engine before use.

This document has been drawn up in order to help you get to know how to use your **MT236** ventilator.



All operating and safety instructions must be strictly followed in order to avoid accidents or problems. All operations involving dismantling or repair must be carried out by **Leader North America, Inc.** or by an approved dealer.

This document demonstrates the ease of use and maintenance of the **MT236** ventilator. If you have any suggestions for improving this document, **Leader North America, Inc.** would be very happy to hear them. Please do not hesitate to contact us.

**PRECAUTIONS FOR USE :**



PPV FANS / VENTILATEURS VPP  
PRECAUTIONS

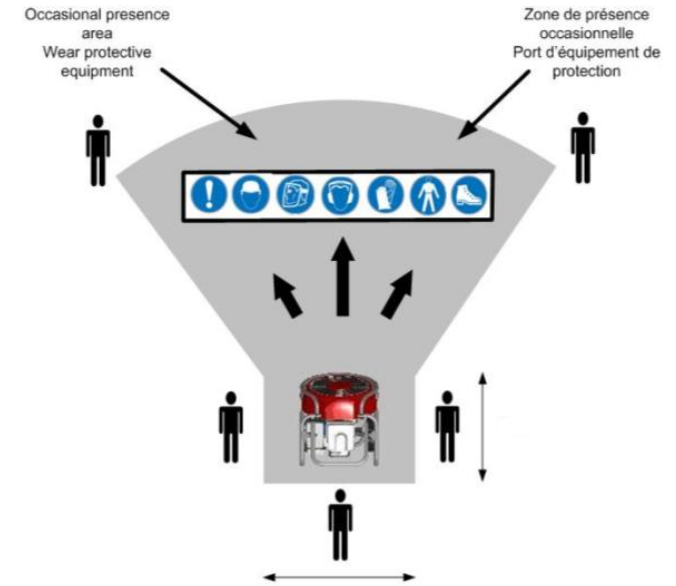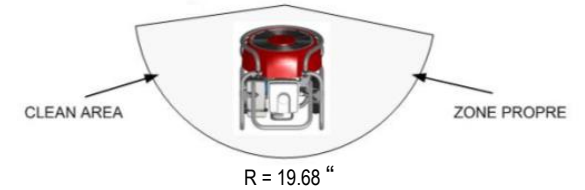

**NOTE :** **MT236** ventilators operate on the high-speed entrained air principle. These portable ventilators are designed to clear smoke and gas, volatile or otherwise, by their blowing (or positive power) action, in all types of premises where an exit has been prepared. They are designed to be used between 6 to 18 feet away from the opening concerned. **Leader North American, Inc** recommends that the minimum opening for escaping smoke should be double or more than the size of the entry opening